

MUSTANG™

SC-REMOTE-RF



How to reset the code for RF remote control?



Procedure

1. PRESS and HOLD the **upper** and **center** buttons of the RECEIVER together simultaneously until the green LED indicator light begins to flash.
2. When the green LED indicator light flashes, press the **upper** button located on the SC-REMOTE-RF (transmitter) and hold until the signal is recognized.
3. The **SC-REMOTE-RF** has now been reset and synchronized with the receiver. You should now be able to control the operation of the projection screen.